

## BONSAI HERO TESTAROSSA MANUAL

- 1) Remember that you Bonsai Hero is designed for leaves only and NOT FOR BRANCHES!
- 2) Your cutter will need about one hour running time the first time you use it to reach normal performance.
- 3) Connect the power supply to a grounded outlet
- 4) Connect the red (+) and black (-) plugs to the power supply unit
- 5) If you wish to plug in additional scissors, plug additional sets in to the back of the first plugs (piggybacking)
- 6) First cut the plants into approximately 8 inch sections using regular scissors.
- 7) Switch on your power supply to start operation
- 8) Hold the round part of the cutter between your thumb and forefinger. Support the bottom of the device with your middle finger. See the drawing.
- 9) With your other hand hold the stem under the bud
- 10) Gently shave the bud, while you are turning it towards the shears
- 11) If necessary, clean the blades by scraping the resin build-up off.
- 12) If you notice abnormal sound or heat development of the cutter, stop working and inspect the machine for dirt and proper adjustment of the blades. In doubt contact your dealer or contact the manufacturer, Napoleon.

## OUTSIDE HARVEST

If you wish to use your Bonsai Hero where there is no outlet available, you can attach the unit to a 6 volt battery. You can also order a special cable to connect to a car cigarette lighter.

## MAINTENANCE

- 1) Keep the blades clean.
- 2) After several days it is necessary to inspect the inner parts of the shears for dirt. To do this unscrew the 4 screws and brush out any plant matter.
- 3) Ensure that the inner parts of the machine are clean and oiled
- 4) If needed use a regular thick machine oil to lubricate. Do not use salad oil, it contains water!
- 5) Check the adjustment of the blades: With the little middle blade in its middle position it should press lightly on the lower blade. The pressure of the blades is adjusted with the nut and bolt. This setting is critical. The small blade must be able to move freely, but be tight enough with the lower blade to ensure proper cutting action.
- 6) If the blades are adjusted too tightly, the machine will not work at normal pace, and will heat and wear away quickly
- 7) Don't use too much force when reinstalling the 4 screws
- 8) The blades will eventually show wear, however until you notice a serious drop in performance, action is not necessary to take action.

- 9) The motor of the Bonsai Hero is maintenance free, if the motor is disassembled warranty is voided

#### SERVICE AND WARRANTY

- 1) Napoleon gives a one year warranty on Manufacturer's faults and abnormal wear.
- 2) Excluded in the warranty are
  - a. Malfunctions due to misuse
  - b. Malfunctions due to lack of maintenance
  - c. Malfunctions due to unauthorized repairs
- 3) Any modifications will immediately void warranty
- 4) If a malfunction should occur you can contact your dealer or Napoleon. Repairs will only occur after the original receipt of purchase is presented

NAPOLEON handelsonderneming  
Postbus 1159, 1500 AD Zaandam  
Tel: 06-54312007  
KvK: 35029607  
[www.bonsaihero.com](http://www.bonsaihero.com)  
[m63@xs4all.nl](mailto:m63@xs4all.nl)